


# FM-Oscillator and IF-Circuit Alignment


Frequency of Signal Generator, Pointer setting	Oscillator	IF-Circuit	Aerial Circuit	Alignment Indicator	Oscillating Voltage	Sensitivity (Noise Power)	Remarks
88 Mc	A) maximum	B) maximum	E)	Outputmeter at AM, FM or unmodulated valve voltmeter at R 28	1,7 ... 2,5 V	3-3.5 kTo	For E) being very broad core should be adjusted approx. 2 mm below top edge of coil form.
106 Mc	C) maximum	D) maximum					

Hum: control closed 1 mV; control opened 2 mV

**GRUNDIG** 5077 WE  
5088 WE

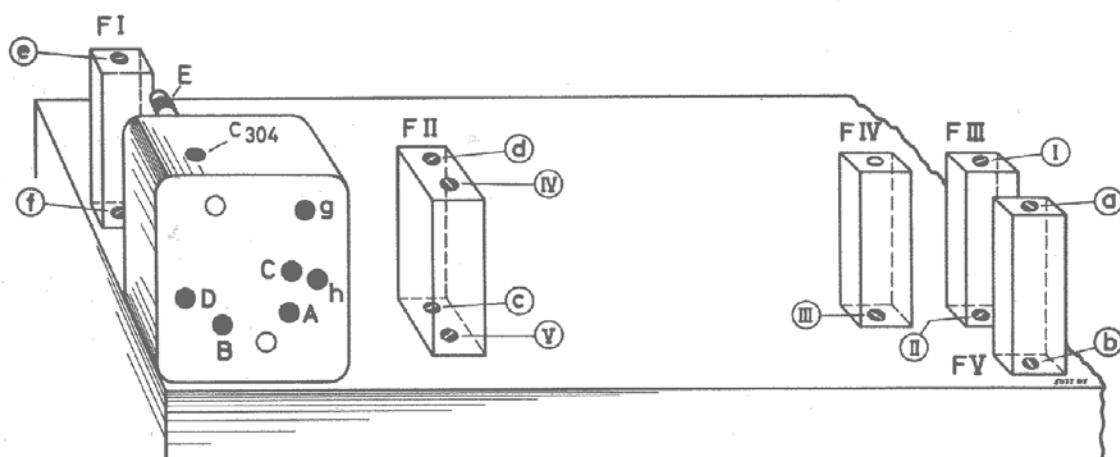

Chassis, Back View

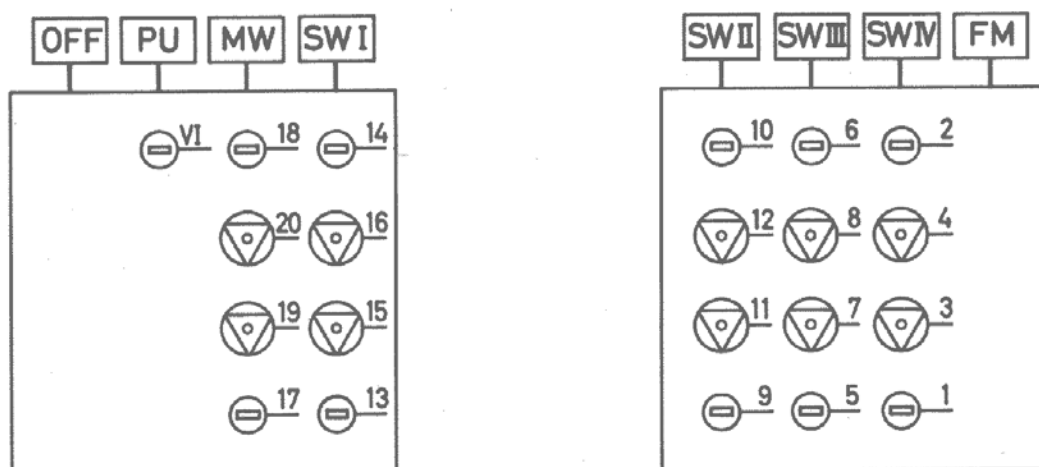

Coil Block, Bottom View