

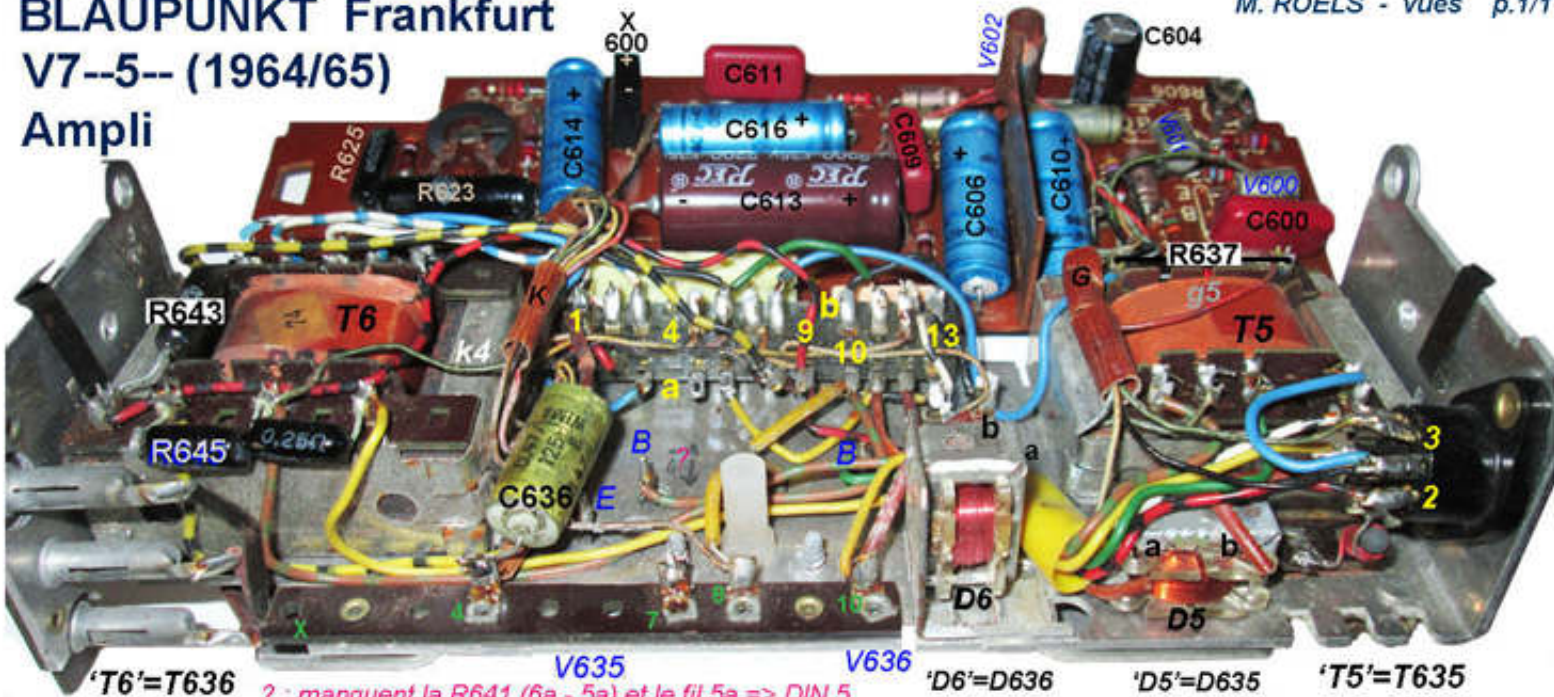


BLAUPUNKT Frankfurt V7-5- (1964/65) Ampli

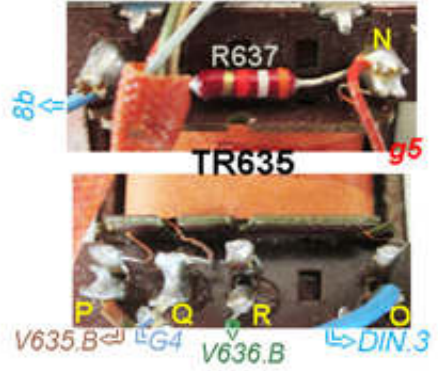

'T6'=T636 ? : manquent la R641 (6a - 5a) et le fil 5a => DIN.5 'D6'=D636 'D5'=D635 'T5'=T635


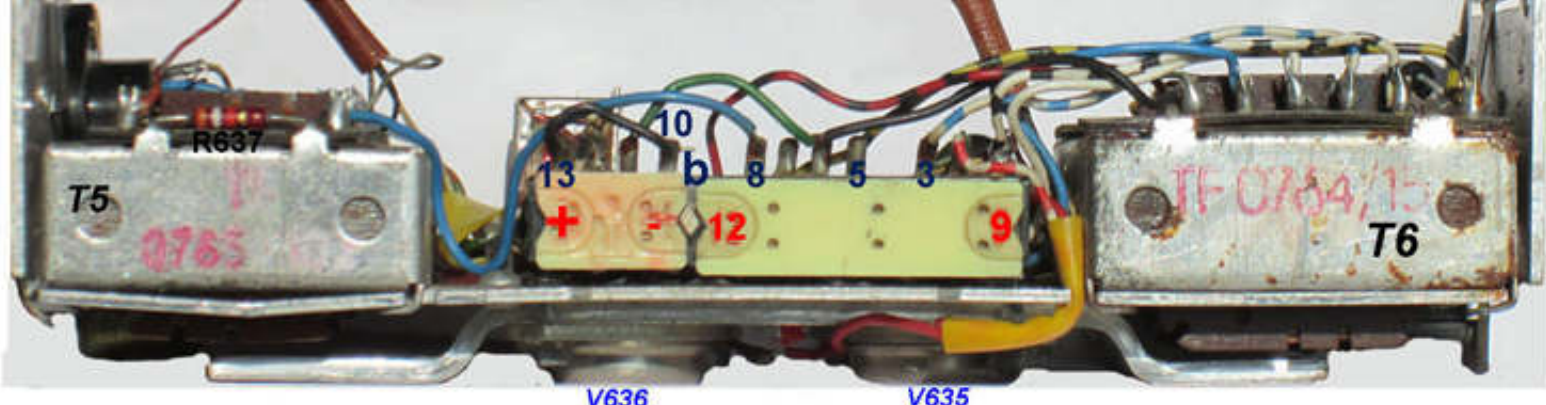


Fils gaine 'K':

- C616+ = K1 (J) => 12b => (Bc/N) DIN.6
- C616- = K2 (N) => 8a => (J/N) R643 => (R/N) 9a => (R/N) DIN.2
- C613- = K3 (R) => 6b { => (V) 11b
- R626 = K3 (R) => 6b { => (N) T6.U
- R620 = K4 (V) => { R645 T5.- => (MV) 10a => (J) R635
- R644
- R620 = K5 (M) => X8 => (J) R635
- R621
- R623
- R625 = K6 (Be) => 5b
- R626

Fils gaine 'G':

- C600 = G1 (V) => DIN.4
- C603- = G2 (N) => DIN.3 => (Bl) T5.O
- R609 = G3 (Be) => 7b
- V601.C
- R621 = G4 (Bl) => T5.Q
- C609 = G5 (5R) { => T1.N
- C612+ { => R637

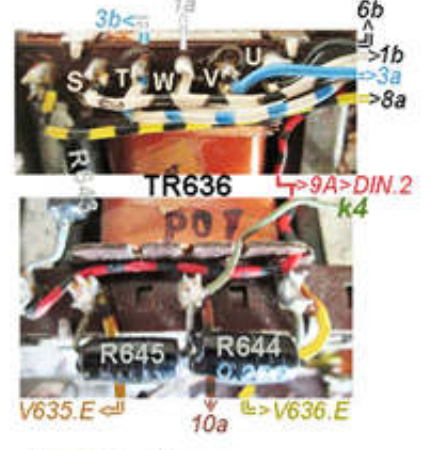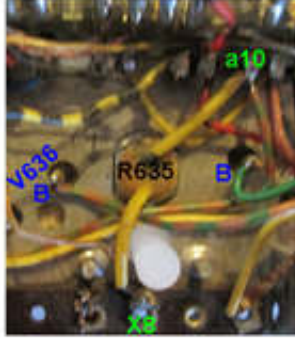

N.B.: Sur cet ampli, R636 ne figure pas
et C636 est branché entre 1a et 1b

